

Cabin

- Clean & dry cushions
- Clean & Inspect head
- Clean & Inspect fresh water tank
- General cleaning of cabin

Below Decks

- Inspect & lubricate seacocks & thruhulls
- Clean, Inspect & dry bilge
- Inspect condition of hoses and clamps on bilge pump
- Test bilge pump

Deck

- Clean non-skid
- Clean windows
- Swing/verify compass (?)
- Inspect cockpit drains
- Inspect stanchion, pulpits and lifelines
- Clean & polish pulpit & stanchions
- Inspect chainplates, cleats and other deck fittings

Standing Rigging

- Inspect standing rigging
- Tune standing rigging
- Clean & lubricate sail track (silicone lube)
- Inspect turnbuckles/pins and safety wire
- Tape rigging

Running Rigging

- Inspect & lubricate winches
- Inspect main sheet and boom vang
- Inspect headsail sheets for wear
- Inspect sheet lead blocks
- Inspect main halyard
- Inspect headsail halyard
- Inspect spare halyard
- Inspect tack downhaul blocks and line
- Inspect headsail furler (sticking at survey)

Docking & Grounding

- Check ground tackle, anchor, rode, roller, mount and backup anchor / rode, etc.
- Check dock lines & install chafing gear
- Clean & inspect fenders

Hull (At Haulout)

- Clean hull
- Inspect for scratches, gouges & dings
- Sand below water line
- Bottom Paint (2 coats minimum)

Electrical System

- Check batteries water level
- Inspect & clean terminals
- Charge batteries
- Inspect wiring
- Check solar panels and charge controller

Navigation and Communication

- Check navigation lights
- Radio check
 - Main Unit
 - Hand-held
- Check GPS/AIS 1
- Check GPS 2
- Check Radar reflectors
- Check Auto-Pilot
- Check cabin lights

Sails

- Check general condition
- Look for wear and chafing
- Check battens and batten pockets
- Check all sail attachments and stitching including grommets, rings, and all reef-points

Safety Equipment

- Check Harnesses/PFDs – Co2?
- Check Jacklines
- Check sound signaling device(s)
- Check expiration dates on flares etc.
- Check PFDs (Type III)
- Inspect life sling & throw line
- Check fire extinguishers
- Check and replace first aid supplies
- Check bailer and hand pump

Diesel Engine, Prop and Drive Shaft

- Check and lube engine controls
- Check hoses & electrical connections
- Check transmission cable connection
- Check transmission fluid
- Check engine oil
- Check antifreeze
- Change Primary Fuel Filter
- Change Secondary Fuel Filter
- Check Stuffing Box Packing
- Check Stuffing Box hose clamps
- Check prop and anode

Getting Under Way

- All Stowed Below
- Decks Clear
- Stern Anchor Ready
- Boat Hook Ready
- Headsail bent on and Sheets run
- Sail cover off and bags stowed
- Seacocks OPEN
- Fuel ON (Eyeball filter bowl)
- Engine start Battery 2 – House Batt 1
- AC Pwr OFF – Trans NEUTRAL
- Start Engine
- Coil and stow AC Pwr cord
- ALL WEARING PFDs